


Heavy-Duty Workbench

Building this 4'-wide workbench is fast and easy with 2x4 lumber and Simpson Strong-Tie® Rigid Tie® RTC2Z connectors. Create a sturdy workbench to act as a storage center and workstation. It's ideal for the garage or basement and can be built in different lengths to accommodate your needs.

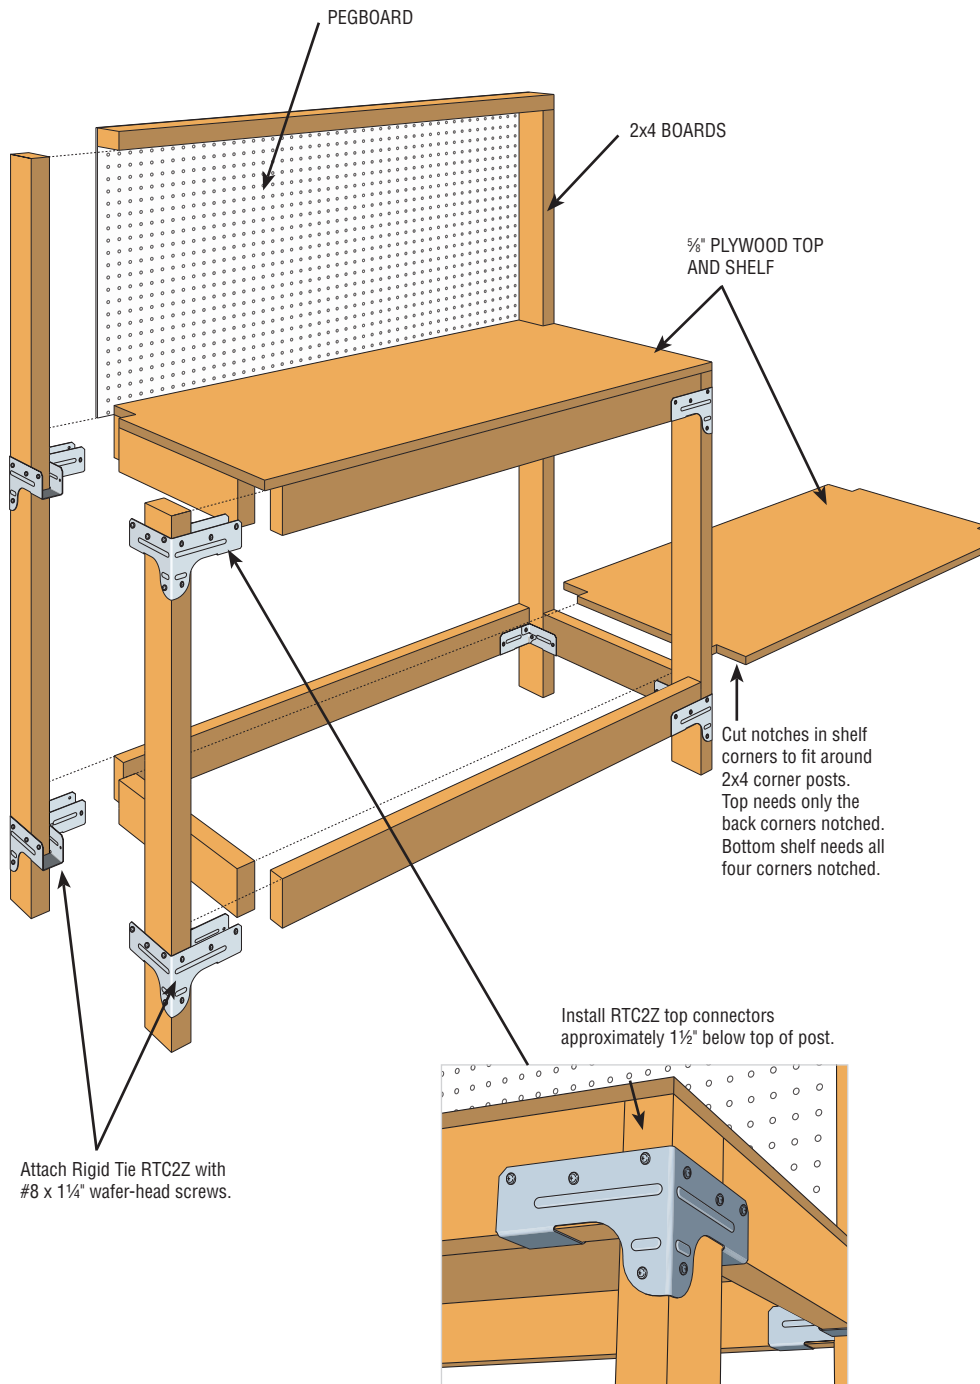

Check out our installation and building tip videos at diydoneright.com.



TOOLS YOU NEED

- Saw
- Screw gun
- #2 Phillips head bit
- Tape measure
- Clamps
- Framing square

Rigid Tie RTC2Z connectors are easy to install and strong enough to support even the heaviest boxes, tools or machinery, and can be finished with paint to blend with the style of your home.


RIGID TIE RTC2Z CONNECTOR INSTALLATION INSTRUCTIONS

1. CUT LUMBER AND PLYWOOD TO SIZE

Since all of your cuts are straight cuts, Simpson Strong-Tie connectors simplify building with wood.


2. INSTALL CONNECTORS ON VERTICAL POSTS

Mark height, clamp connector to post and attach with Simpson Strong-Tie #8 x 1 1/4" wafer-head screws. No predrilling is needed.

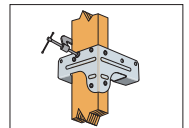


3. CONNECT HORIZONTAL RAILS ON EACH SIDE

Use a clamp to help hold the wood in the seat of the connector during installation.

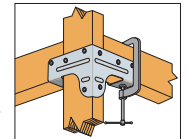


4. NOTCH CORNERS OF PLYWOOD SHELVES

Use a piece of 2x4 on each corner of the shelf, trace and cut to accommodate corner posts (only notch back corners of top shelf).

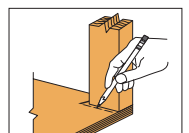

2' x 4' Heavy-Duty Workbench

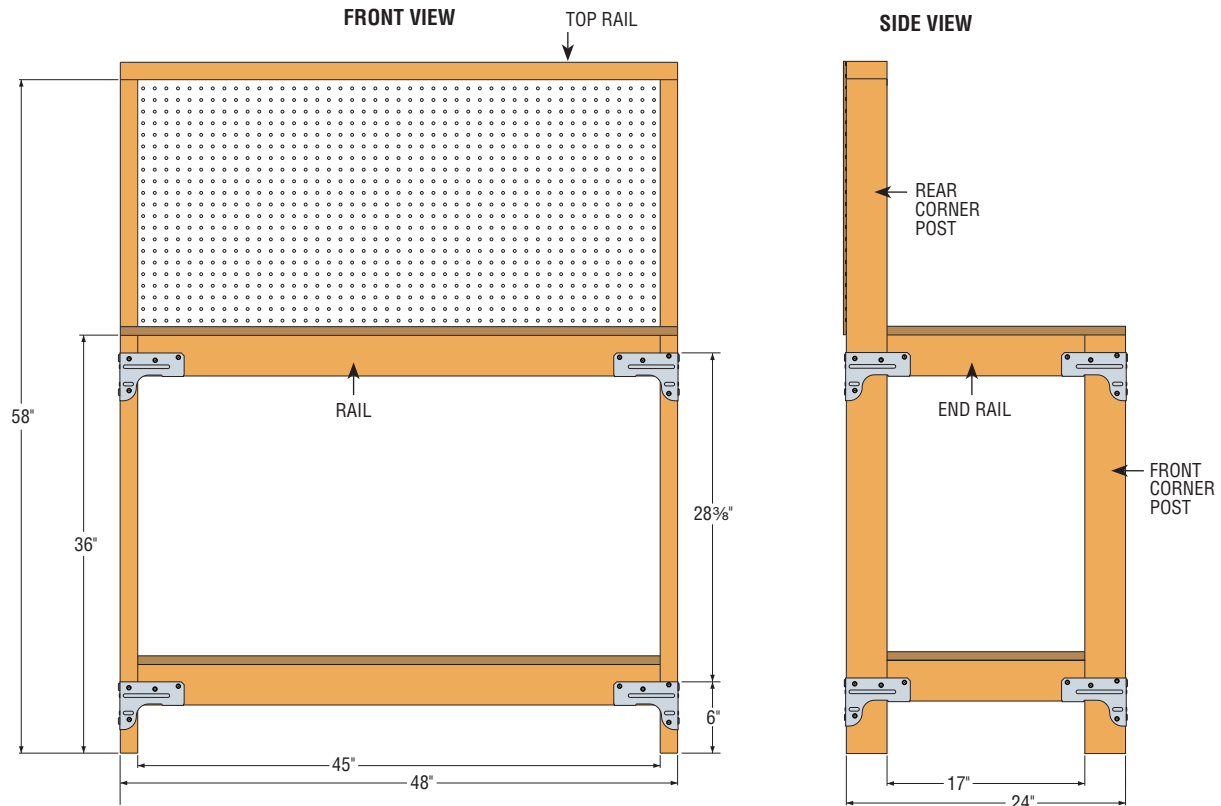

FOR THIS PROJECT, YOU WILL NEED:

LUMBER

- (6) – pieces of 2x4 x 8' lumber
- (1) – 4' x 4' sheet of 5/8" plywood
- (1) – 2' x 4' sheet of 1/4" pegboard


SIMPSON STRONG-TIE® CONNECTORS

- (8) – Rigid Tie® RTC2Z connectors

FASTENERS

- (1) – BOX Simpson Strong-Tie #8 x 1 1/4" wafer-head screws
- (20) – #6 x 1 1/4" bugle-head screws
- (4) – #6 x 2 1/2" bugle-head screws

CUT FROM 2x4 x 8' LUMBER

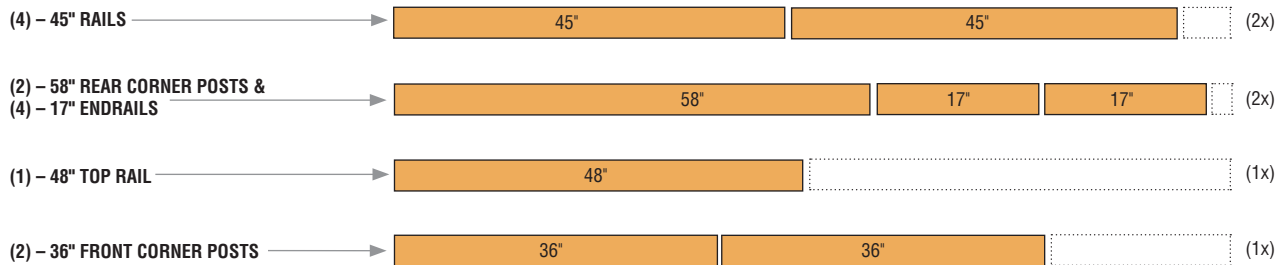

CUT FROM PLYWOOD AND PEGBOARD

(1) – TOP/BOTTOM SHELF

24" x 48" 5/8" plywood



Cut both shelves from

(1) 4' x 4' sheet of 5/8" plywood.

Attach with #6 x 1 1/4" flat-head screws.

(1) – 24" x 48" PEGBOARD

Attach with #8 x 1 1/4" wafer-head screws.

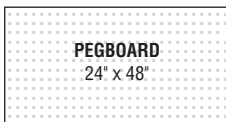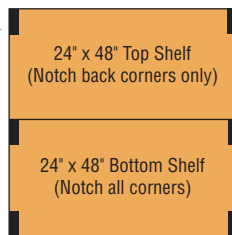

The construction plan for this project is designed to be completed by people with basic carpentry skills in standard situations. If your situation is unique, talk with someone with detailed carpentry or construction experience before starting your project. Particular attention was paid to the steps and details in this plan, but they cannot be guaranteed to be error free. Simpson Strong-Tie shall not be responsible for any possible loss, damage or injury resulting directly or indirectly from the information contained here.

© 2017 Simpson Strong-Tie Company Inc. • P.O. Box 10789, Pleasanton, CA 94588

DIY-CSWRKBCH17 8/17 exp. 12/21

(800) 999-5099
strongtie.com